


HEAVY DUTY ROLLATOR BRAKE HANDLE ASSEMBLY™

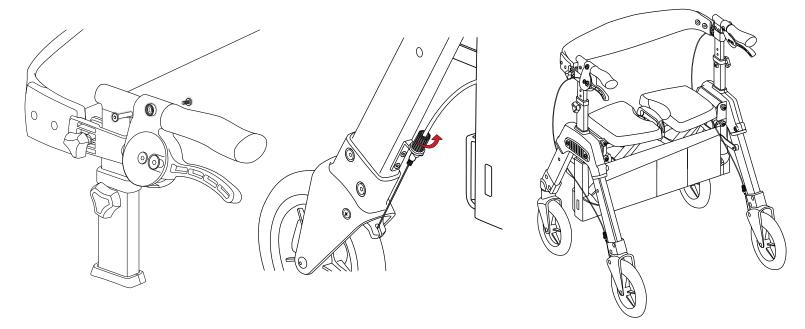

Replacement Brake Handle Assembly

If servicing both sides do one side at a time. This will allow you to use the opposite side as a reference.

Removal Instructions

- 1. Slide or cut hand grip off handlebar
- 2. Remove upper bolt on brake handle using 5mm Allen wrench and #2 Phillips screwdriver
- 3. Remove brake lever from handlebar
- 4. Remove cable housing from clip on frame
- 5. Turn adjustment knob until fully seated on leg bracket
- 5. Slide cable off pivoting brake bracket
- 6. Twist adjustment knob until free of leg bracket
- 7. Remove cable assembly

Installation Instructions

- 1. Slide brake lever onto handlebar and secure mounting hardware using 5mm Allen wrench and #2 Phillips screwdriver
- 2. Make sure mounting bolt passes through the back strap webbing inside the handlebar
- 3. Slide grip firmly into place
- 4. Place cable sheath in clip on frame
- 5. Make sure brake handle is NOT in parking brake position

- 6. Thread adjustment knob leg bracket as far as possible, with spring below bracket
- 7. Press down on pivoting brake lever to compress spring
- 8. Feed cable through slot in pivoting bracket, and push cable to center of bracket
- 9. Turn adjustment knob until pivoting brake lever is close to wheel, while allowing wheel to freely spin
- 10. Check brake function before use

Brake Adjustment

- 1. Make sure brake handle is NOT in parking brake position
- 2. Turn adjustment barrel at bottom of cable until pivoting brake lever is close to wheel
- 3. Brake lever should be close to wheel, while allowing wheel to freely spin
- 5. Check brake function before use

PRODUCT #4360-003

Compatible with: Stander #4360 EZ Fold-N-Go Rollator-HD, Signature Life #7680 Elite Travel Rollator-HD, Able Life #4260 Space Saver Rollator-HD